

STEREO IMPACT SWEA LVPS

2/19/2004

Requesting Engineer:

David Stone

Date:

4-15-04

Approved by:

Peter Bung

Date:

4-15-04

Approved by: _____

Date: _____

STEREO IMPACT SWEA LVPS REWORK INSTRUCTIONS

1. D30 and D32 must be moved to accommodate T4.

T4 is larger than its PWB outline, and extends into the locations for D30 and D32. The following modifications will accommodate the size of T4. (Note that T4 itself will not be installed until the appropriate point is reached in the LVPS Test Procedure.)

- 1) Remove D30 and D32. Install new diodes for D30 and D32 on the bottom side of the board, as indicated in the photograph below.

COMPLETED BY _____

DATE _____

STEREO IMPACT SWEA LVPS
Requesting Engineer: David Stone

2/19/2004

Date: 4-15-04

Approved by: Peter Benz


Date: 4-15-04

Approved by: Wendy W. At

Date: 4-15-04

D30 anode

D30 cathode

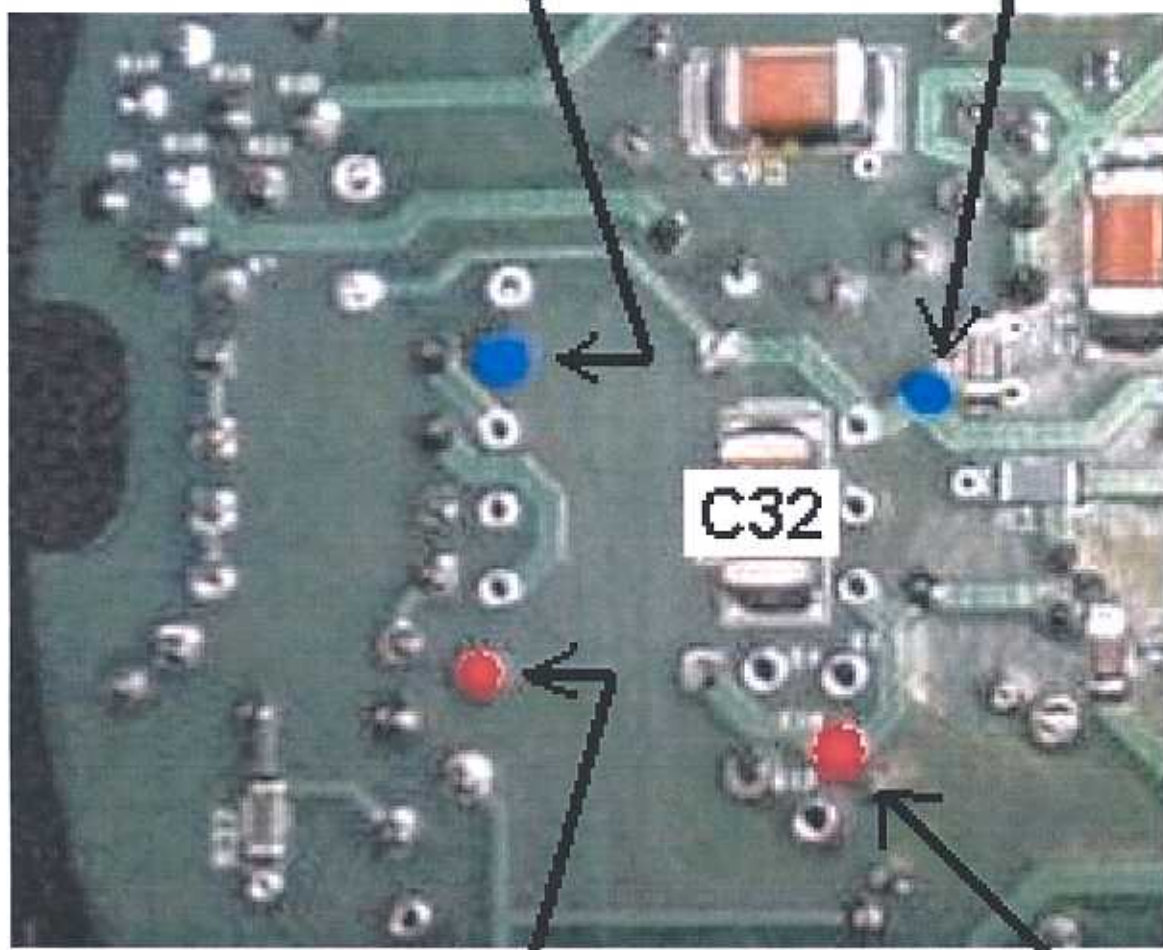

D32 anode

D32 cathode

Approved by: Ken Jackson

Date: 4/15/04